




Ceramic Hob K439 Operating Instructions

Please ensure the switch (hob) on the wall is on

TO SWITCH ON HOB

- Touch the ON / OFF Sensor ①

A  appears in the display for each of the zones. If no further entry is made the hob will switch itself off after a few seconds for safety reasons.

TO SWITCH COOKING ZONE ON



- Select a power setting up to  by touching the – or + sensor.

To select cooking **without** Auto heat-up press the + sensor first

To select cooking **with** Auto heat-up press the – sensor first

When **Auto heat-up** has been activated, the cooking zone switches on automatically at the highest setting and then switches to the continued cooking setting which you have previously selected

TO ACTIVATE AUTO HEAT UP

While the  is flashing in the cooking zone display, touch the – sensor until the required continued cooking setting appears. Level  being the highest.

During heat up time a dot will light up to the right of the continued cooking setting, and go out at the end of it.

OPERATING THE TREBLE CIRCLE ZONE


Depending on the size of the cooking pot/pan, you can switch on the middle or the middle and outer circle to provide a larger cooking area.

Before or after selecting the power setting, touch the sensor as often as needed until the number of circles are activated.

- First touch - Second (middle) circle is activated
- Second touch – Third outer circle is activated
- Third Touch – Both additional circles are switched off

TO SWITCH OF A COOKING ZONE

- Touch the – and + sensors for the zone you want to switch off at the same time.

A  will light up in the display for that zone for a few seconds. If the cooking zone is still hot then the residual heat will be indicated in the display.

TO SWITCH THE HOB OFF

- Touch the ON / OFF Sensor ①

RESIDUAL HEAT INDICATOR

The residual heat indicators will not go out until the cooking zone is safe to touch.