 





## Operating Instructions Coffee Machine CVA 2660

### EXTERNAL VIEW

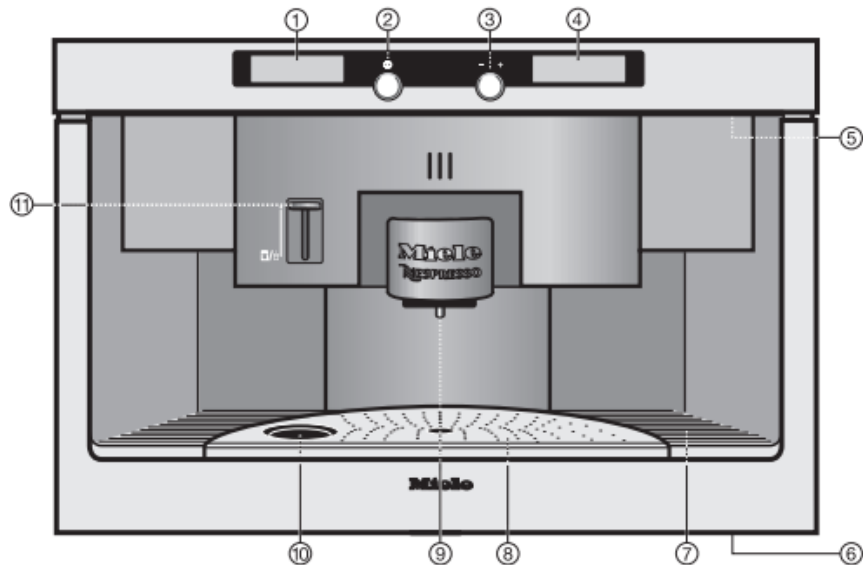

 - 1 Left display
- 2 Left control dial
- 3 Right control dial
- 4 Right display
- 5 Upper door handle for use when built-in at a lower level, e.g. at worktop height
- 6 Lower door handle for use when built-in at a higher level, e.g. in a tall unit
- 7 Plastic grille
- 8 Metal drip tray
- 9 Spout
- 10 Inset for Cappuccinatore (Milk frother)
- 11 Valve for steam and hot water

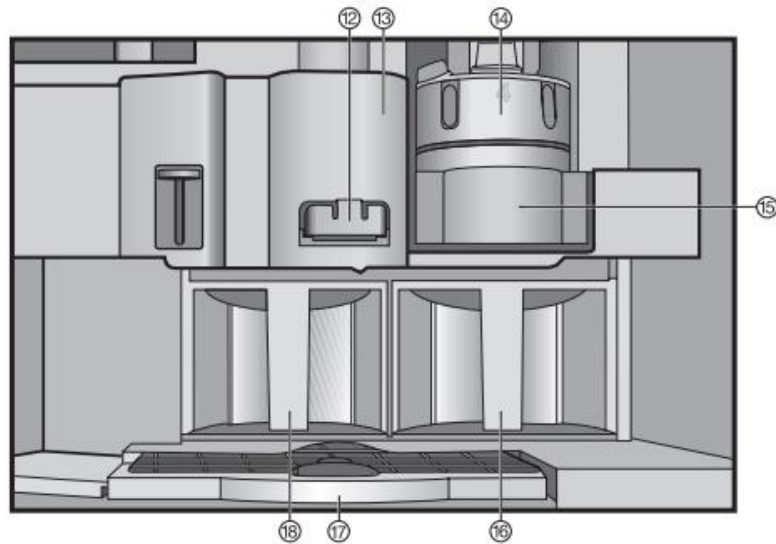

- 12 Capsule plate (replaced with the descaling funnel when descaling is carried out)
- 13 Brew unit
- 14 Capsule magazine
- 15 Magazine runners
- 16 Water container
- 17 Drip tray with grid
- 18 Waste container

### **LEFT CONTROL DIAL**

The dial can be pressed and turned.

Pressing the dial – switches the appliance on and off.

Turning the dial – selects a programme stage or setting.

### **RIGHT CONTROL DIAL**

This dial can also be pressed and turned.

 
Turning the dial - calls up a programme stage or a setting.

Pressing the dial - starts and halts drink preparation

selects a programme stage so that it can be altered and customised, and saves a setting so that the setting is stored in memory when the appliance is switched off.

## SWITCHING ON

Press the left-hand dial - The left display will light up

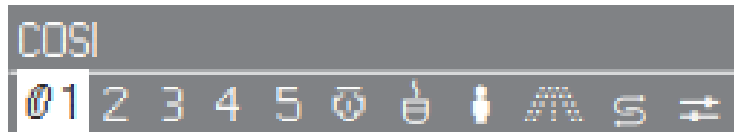

In the right display the following will light up



 
This is a reminder to fill with fresh water however please note that capsules and water is pre-filled for your convenience

The following message will appear



It will perform a hot water rinse, please place a cup under the spout in the centre of the machine

You will see the following message appear

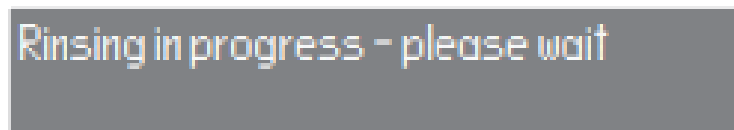


Water will run out of the spout. You will hear the capsule magazine moving into position. The right display will then show





Place a cup under the two coffee dispensers.  
Turn the right control dial to the required size of coffee and then press the control dial.

The drink you have selected will then run out of the spout

## STEAMING MILK

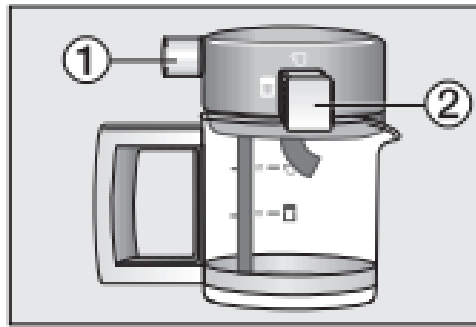 

  The milk front has a valve ( 1 ) above the handle and a spout for the froth in the lid ( 2 )  
Turning the valve, controls the amount of steam released. Turn it towards ( 1 ) for less froth and towards ( 2 ) for more froth.

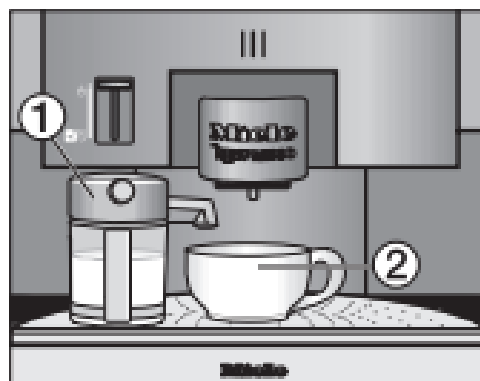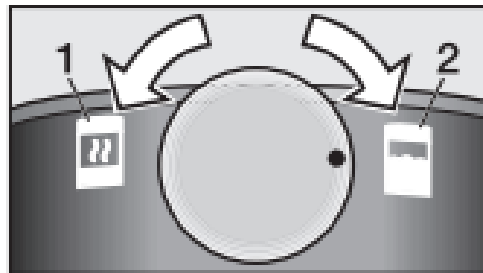

Fill the milk frother a up to the top mark with cold milk, fit the lid, and place it in position on the drip tray

Turn the froth spout so that you can pour the frothed milk into the cup  
Turn the left control until it reads:

 


Press on the steam valve ( 1 ) to connect the valve to the milk frother ( 2 ). The steam valve must engage in the lower position in order to connect properly with the frother.

The milk is frothed up by the hot steam, and then flow into the cup of Espresso or coffee.

Turn the valve on the frothers to control the froth.

When you have enough froth turn the steam valve back upwards again.

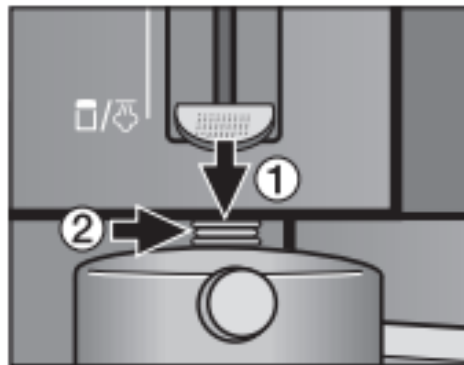


## **HOT WATER**

Place a suitable container (eg a tea cup) under the steam spout. Turn the left control dial until you reach the "Hot water" menu option.



Press the right control dial. Hot water will be dispensed from the steam spout. When you have sufficient hot water press the right control dial again to stop
 
## **CAPSULES EMPTY**

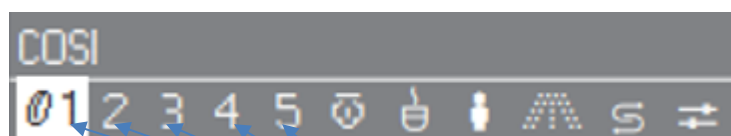

\*\*\* The coffee capsule carousel has 5 chambers which each hold 4 capsules.  
Making a total of 20 capsules available\*\*\*

If a message appears in the righthand screen stating that the coffee capsules are empty you will need to turn the left hand knob to move to the next chamber.