



Dishwasher Operating Instructions

LOADING THE DISHWASHER

- Open the door
- Make sure the spray arms are not obstructed
- Load the dishwasher.
For larger/heavier items such as plates, serving platters, saucepans and bowls use the lower basket.
Smaller items such as saucers can also be placed in the lower basket. Cutlery can be placed (depending on the model) in the top pull out tray or in the lower cutlery basket.
Do not place thin, delicate glassware in the lower basket.
- Press open the catch on the dispenser found on inside of the dishwasher door. The flap will spring open. Add detergent into the dispenser compartment.
You may use conventional powder or tablets.
DO NOT USE dishwashing Liquid.
- Ensure it is properly closed after adding detergent.
- Switch the dishwasher on using the On button I. The On indicator I and the indicator for the last used programme lights up

SELECTING A PROGRAMME

- Choose your programme according to the type of load and how dirty it is.
- Select the programme required using the programme selector button.
- The indicator for the programme selected lights up.
- The programme duration will appear in the hours and minutes in the time left display.
(If the "2 in 1" or "3 in 1 Tab" function has been selected, the corresponding indicator lights up as well).
- Close the door, the dishwasher will start its programme

AT THE END OF THE PROGRAMME

- Open the door
- Switch the dishwasher off using the Off button O.