 





Microwave Combination Oven H4050 4060BM Operating Instructions

SELECTING FUNCTION

- Press the ON/OFF switch to call up the main menu

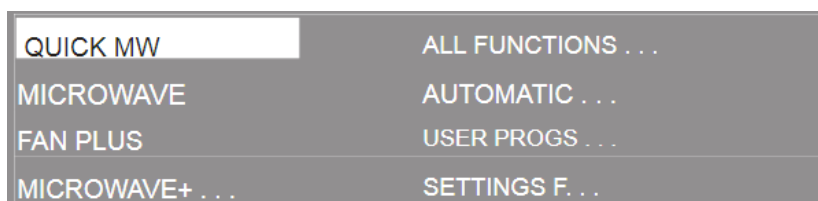

 - Turn the function selector to highlight the option you wish to select.
- Press the function selector to call up the sub-menu of the option you have highlighted (e.g. microwave)

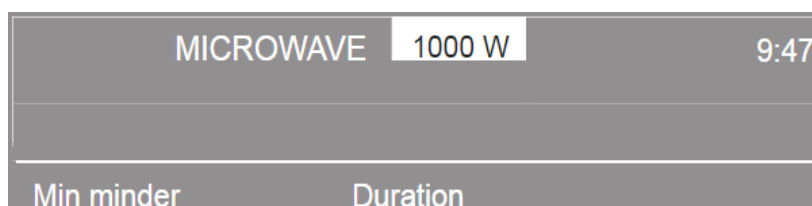


The field selected shows a suggested power level of 600W however it may be adjusted to 850W or 1200W

- Turn the function selector if you wish to change/lower this setting

SELECTING DURATION / START

 - A few seconds after the power level is selected, the display will change and you can enter the duration for the microwave programme

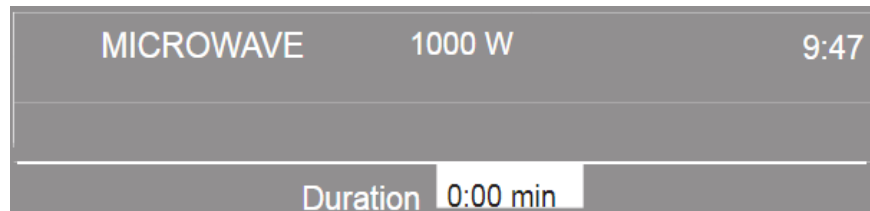

- Turn the function selector until the required duration shows in the display
- Press the function selector to confirm your selection
- The word 'START' will be highlighted for a few seconds
- Press the function selector whilst 'START' is highlighted to start the programme

GRILL

- Select the grill by turning the function selector to All Functions and select Grill
The grill temperature cannot be altered it is either on or off
- Preheat Grill for approx. 5 minutes with the oven door shut before grilling. Do not engage microwave power while during the pre-heating phase.