


Microwave Combination Oven H 4010 BM H4020 BM Operating Instructions


SELECTING FUNCTIONS

The function selector can be turned clockwise or anti-clockwise

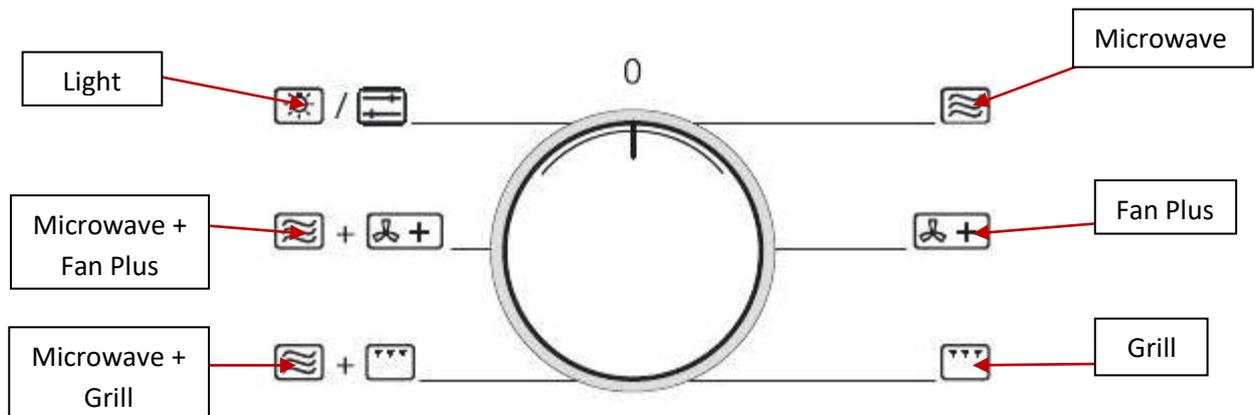

SELECTING TEMPERATURE

The temperature selector can only be turned clockwise

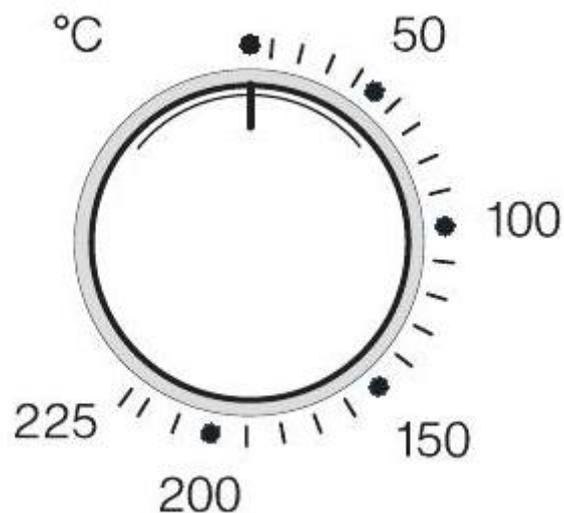

FUNCTIONS

Microwave

- Turn the function selector to Microwave
- The display shows a suggested power level of 1000 W
- Whilst the triangle on the display is flashing, use the – button to alter the power level if required.
- After 5 seconds, the triangle will begin to flash. You may then use the + button to enter the required duration in minutes: seconds. A symbol will flash in the right bottom corner of the display to tell you to start the process.
- Press the  button to start the process

Fan Plus

This function can be used to cook or brown food using the circulation of heated air.

- Turn the function selector to Fan Plus and then turn the temperature selector to your desired temperature. The temperature indicator light on the control panel will light up. When the pre-selected temperature is reached, the heating element switches itself off. When the temperature falls below that selected, the heating element switches on again automatically.

Grill

- Turn the function selector to Grill. The grill temperature cannot be altered it is either ON or OFF.
- Preheat the Grill for approx. 5 minutes with the oven door shut before grilling. Grill with the oven door closed

Cooking Duration (Timer)

When you enter a cooking duration, the oven will switch off automatically after the duration entered has elapsed.

To do this:

- Place the food in the oven
- Set the function and temperature as appropriate

The oven light will come on and the oven will heat up

- Call up the  symbol (cooking duration) with the  button.  appears in the display.
- Whilst the  is flashing, use the + button to enter the required duration hours: minutes.