




## Tumble Dryer T8423 C Operating Instructions

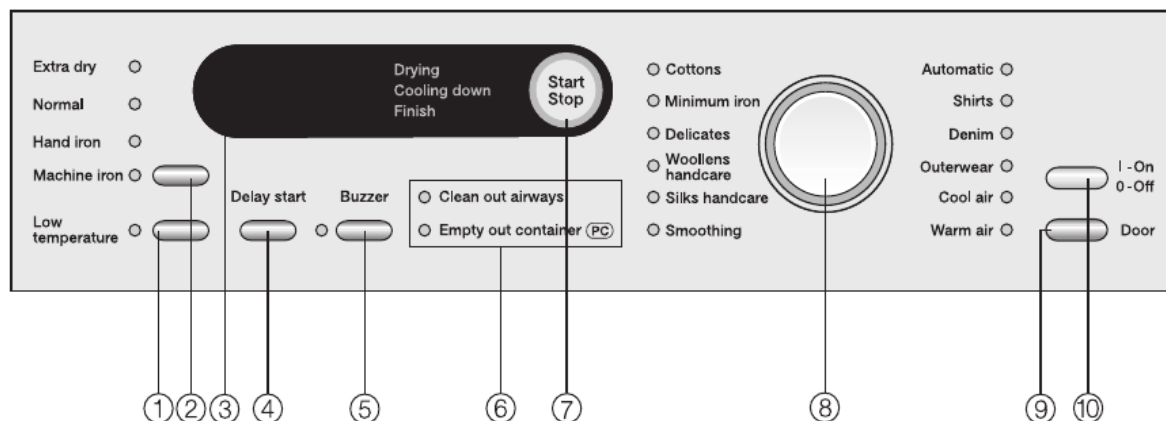

### a **Low temperature button**

Delicate fabrics are dried at a lower temperature.

### b **Drying level button**

with indicator lights

### c **Display**

### d **Delay start button**

This button is used for:

- Selecting the duration of the *Timed drying* programmes
- Delaying the start of a programme

### e **Buzzer button**

An audible tone sounds at the end of the programme.

### f **Check lights**

For a description of these lights see: "Problem solving guide" / "After sales service".

### g **Start/Stop button**

For starting the programme selected and cancelling a programme once it has started.

The indicator light flashes while a programme is being selected and then is on constantly when the programme has started.

### h **Programme selector**

with indicator lights

### i **Door button**

Pressing this button will open the door even when the dryer is switched off at the mains.

### j **I-On/0-Off button**

For switching the dryer on and off.