


Tumble Dryer T 8423 C Operating Instructions

CONTROL PANEL

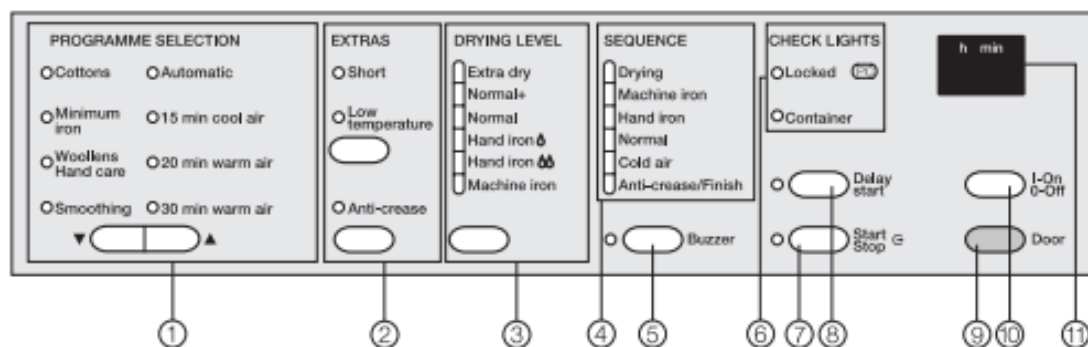

- 1 **Programme** buttons with indicator lights. For selecting a drying programme.
- 2 **Extras** buttons with indicator lights. Various Extras (options) can be added to the drying programmes.
- 3 **Drying Level** button with indicator lights. For selecting the drying level.
- 4 **Drying Sequence** indicator lights Show which stage the programme is at.
- 5 **Buzzer** button is an audible tone sounds at the end of the programme.
- 6 **Check lights** These indicator lights have various functions. See Problem solving guide.
- 7 **Start/Stop** button for starting the programme selected and cancelling a programme once it has started. The indicator light flashes while a programme is being selected and then is on constantly when the programme has started. Pressing this button while drying is in progress will cancel the programme.
- 8 **Delay Start** button You can delay the start of a programme (by up to 24 hours). The indicator light flashes while the delay start time is being selected, and is on constantly after it has begun.
- 9 **Door** Button Pressing this button will open the door even if the machine is switched off at the mains.
- 10 **I-On/O-Off** button For switching the dryer on and off.
- 11 **Display h min** The display fulfils several functions.

OPERATING THE DRYER

- Switch the dryer on by pressing the I-On/0-Off button in.
- Press the door button to open the door.
- Load the laundry loosely into the drum. Do not overload the drum.
- Before closing the door make sure the fluff filter is correctly positioned in the door. Check the laundry is right inside the drum so that it cannot get trapped or damaged when the door is shut.
- Shut the door either with a gentle swing, or lean against it and push it shut.
- Press the ▼ or ▲ buttons repeatedly until the indicator light for the programme you want lights up.
 - Extras and drying level indicator lights may also come on (Memory function).
 - The duration of the programme selected will depend on the residual moisture of the laundry, fabric type and the load size. This may mean that each new programme will vary in duration. The Warm air and Cool air programme times are fixed.
- Press the Drying Level button repeatedly until the indicator light for the drying level you want comes on.
- Press the Start/Stop button. – The indicator light for the Start/Stop button will then change from flashing to being on constantly. – A few seconds later, the programme time remaining will appear in the display. – The sequence indicator light for the drying stage reached will come on. The programme will commence.
- A buzzer will sound when the program has finished
- Press the Door button.
- Open the door.
- Remove the laundry
- Switch the dryer off by pressing the I-On/0-Off button.
- Clean the fluff filters.
- Close the door.