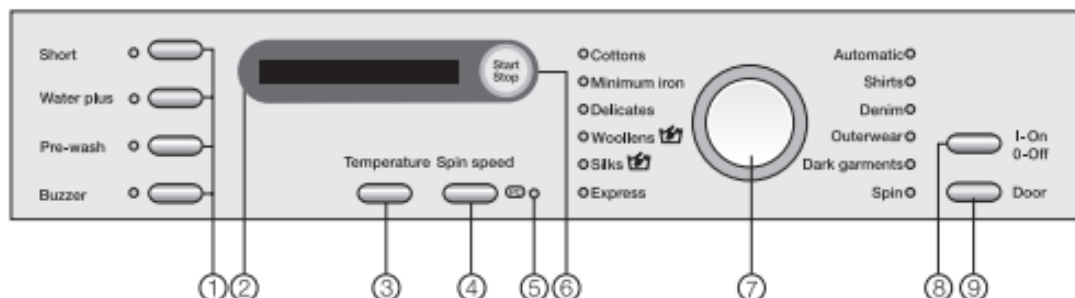 






Washing Machine W3725 Operating Instructions

 


CONTROL PANEL

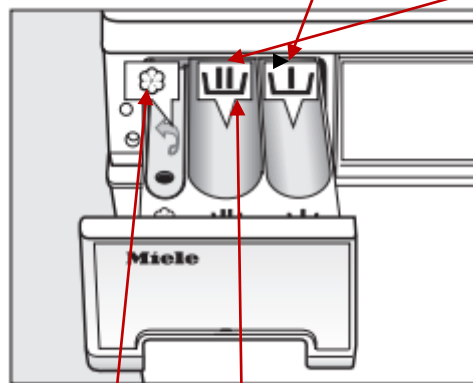 




- 1 Extra option buttons** Various extra options can be added to the washing programmes.
- 2 Display**
- 3 Temperature button** For selecting a temperature.
- 4 Spin speed button** For selecting the final spin speed or  (Rinse hold) or No  (Without spin).
- 5 PC / Optical interface** This is used by service technicians to run diagnostic checks on your machine and can also be used to update programming data in the future.
- 6 Start/Stop button** For starting the programme selected and cancelling a programme once it has started.
- 7 Programme selector** For selecting a programme. The indicator light next to the selected programme will come on. The programme selector can be turned clockwise or anti-clockwise.
- 8 I-On/0-Off button** For switching the machine on or off
- 9 Door button** Opens the machine door.

OPERATING THE MACHINE

- Switch on the washing machine
- Press the Door button to open the drum door.
- Load loosely in the drum. Mixing both large and small items gives better wash results and also helps distribute the load evenly during spinning. The most efficient use of energy and water is achieved when a full load is washed. However, do not overload as this causes creases and reduces cleaning efficiency. Make sure that no garments are caught between the drum door and seal.
- Shut the door with a gentle swing.
- Select a programme
- Turn the programme selector clockwise or anti-clockwise to the required programme. The programme indicator light for the programme selected will come on.
- Select a temperature / spin speed. The suggested temperature and/or spin speed can be changed. 1:49 40°C 1300
- Press the Temperature button to alter the temperature and press the Spin speed button to alter the spin speed.
- Pull out the detergent drawer and place detergent in the compartments as follows:

 **Detergent for the pre-wash** - Divide the total recommended amount as follows: add 1/3 to compartment  and 2/3 to compartment 



 **Detergent for the main wash**
 **Fabric Softener**

- Close the detergent drawer
- Press the flashing Start/Stop button
- When the programme is complete the word finish will appear
- Press the Door button to open the drum door.
- Remove the laundry.
- Switch the machine off with the I-On/0-Off button