 


Washing Machine W3831 WPS Operating Instructions

CONTROL PANEL

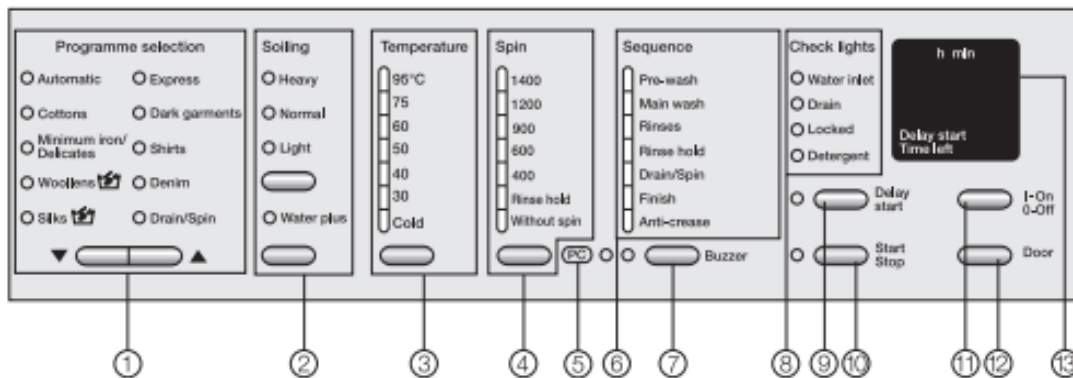

- 1 **Programme** buttons
- 2 **Selecting a washing programme.**
- 3 **Soiling** button for specifying the degree of soiling of the laundry. Water plus button for increasing the water level.
- 4 **Temperature** button for selecting a temperature.
- 5 **Spin speed** button for selecting a final spin speed.
- 6 **PC / Optical interface** is used by service technicians
- 7 **Sequence indicator** lights Show which section of the wash programme has been reached.
- 8 **Buzzer** button
- 9 **Check lights**
- 10 **Delay start** button for delaying the start of a programme.
- 11 **Start/Stop** button for starting the programme selected and cancelling a programme once it has started.
- 12 **I-On/0-Off** button for switching the machine on or off.
- 13 **Door** button opens the machine door.
- 14 **Display** (h min) The display fulfils several functions, programme duration (Time left display) – delay start – the programmable functions

 
OPERATING THE MACHINE

- Switch on the washing machine
- Press the Door button to open the drum door.
- Unfold the laundry and load loosely in the drum. Mixing both large and small items gives better wash results and also helps distribute the load evenly during spinning. The most efficient use of energy and water is achieved when a full load is washed. However, do not overload as this causes creases and reduces cleaning efficiency. Make sure that no garments are caught between the drum door and seal.
- Shut the door with a gentle swing
- Select a programme
- Press the ▼ or ▲ button repeatedly until the indicator light for the programme you want lights up.




Specify the degree of soiling of the laundry

- Press the top button to select the degree of soiling. Normal is the default setting. Use the lower button to select the Water plus option.
- Press the top button repeatedly until the degree of soiling you want lights up.
- Press the Water plus button if you want to activate this function. You cannot select the degree of soiling or Water plus for every programme.



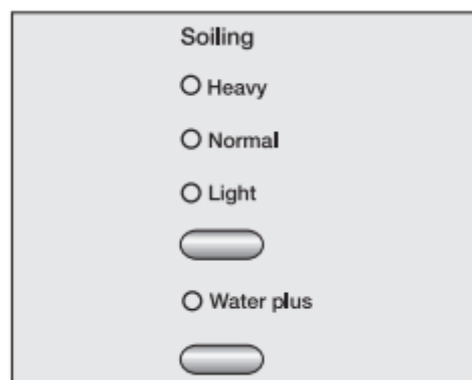



Setting the temperature

 - You can change the pre-set temperature or spin speed by pressing the Temperature or Spin button. In some programmes the maximum temperature and spin speed is limited. The machine will not allow a higher value to be selected.

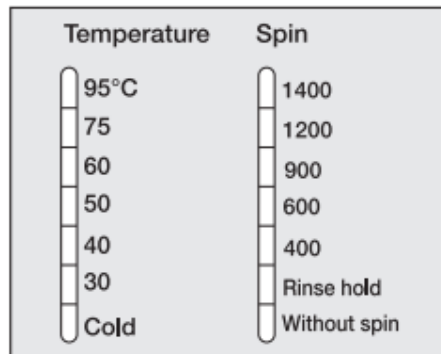

   - Press the Temperature or Spin button repeatedly until the indicator light for the value you want comes on.
- Press the Buzzer button to be reminded when the programme is finished
- Pull out the detergent drawer and place detergent in the compartments:

  **Detergent for the pre-wash** – If soiled level is heavy divide the total recommended amount as follows: add 1/3 to compartment  and 2/3 to compartment 

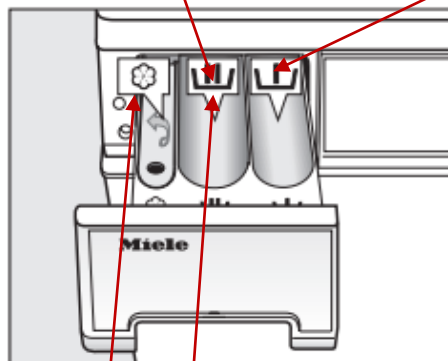

 **Detergent for the main wash**
 **Fabric Softener**

- Close the detergent drawer
- Press the flashing Start/Stop button
- The Finish and Anti-crease Sequence indicator lights will come on when the programme is finished and you will hear a buzzer if selected.
- Press the Door button to open the drum door.
- Remove the laundry
- Switch the machine off with the I-On/O-Off button