


Brief guide

The headings numbered (1, 2, 3, ...) show the operating sequence and can be used as a brief guide.

Before washing

1 Prepare the wash load.

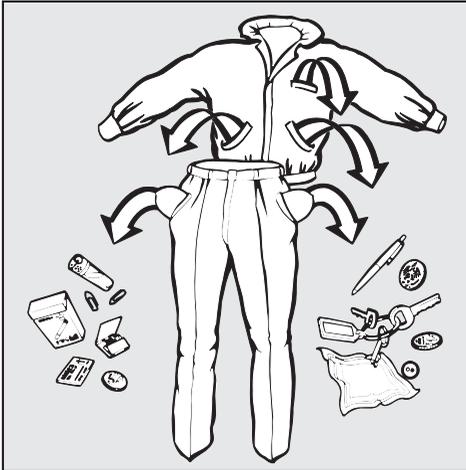

- Empty all pockets.

Foreign objects (e.g. nails, coins, paper clips etc) can cause damage to textiles and components in the machine.

- Sort the washing.

Most garments have a textile care label in the collar or side seam. Sort the washing by care label symbols. (See the section on these symbols for their explanation).

Dark textiles often contain excess dye and should be washed separately several times before being included in a mixed load.

Delicate textiles should be washed separately in a delicates programme (use a washing bag where appropriate).

Do not wash any items in this machine which are specified by the manufacturer as **non-machine washable** on the care label. (☒ symbol)

- Pre-treat the washing

Badly soiled areas, e.g. collars and cuffs, and water soluble stains can be pre-treated with bar soap, liquid detergent or detergent mixed into a solution or paste.

With particularly stubborn stains ask your dry cleaner for advice. Do not use solvent-based cleaning agents in this machine.

- **Curtains:**
Remove lead weights and strips or place in a laundry bag.
- **Underwiring and collar stiffeners:**
Any loose wiring in bras, shirt collar stiffeners etc should be removed or sewn in.
- **Knitted garments, trousers and jeans, T and sweat shirts:**
Turn inside out, if recommended by the manufacturer.

How to wash correctly

2 Press in the “I-On/0-Off” button.

The machine is switched on.

3 Press the “Door” button.

4 Load the drum.

Unfold washing and load loosely in the drum. To achieve best results it is advisable to make up mixed loads consisting of both large and small items. This improves the washing effect and helps distribute the load evenly to keep the machine stable and reduce the noise level during spinning.

Overloading reduces the wash result and causes more creasing.

Maximum load weights are noted below:

COTTONS	5.0 kg
MINIMUM IRON	2.5 kg
DELICATES/SYNTHETICS	1.0 kg
WOOLLENS	1.0 kg
QUICK WASH	2.5 kg
MIXED WASH/Polycottons	3.0 kg

5 Close the drum door.

Make sure that there is no obstruction between the drum door and seal.


6 Open the stopcock.

7 Add detergent.

See section on “detergent” for details.


To start a programme

8 Select the basic programme

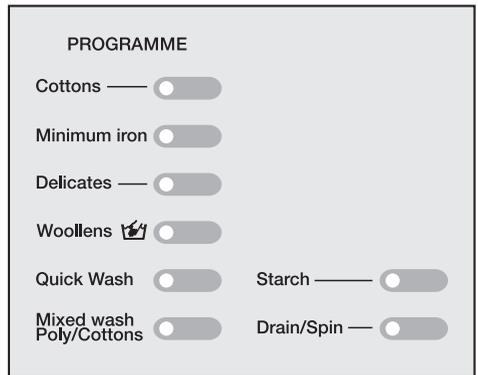

- Press the required basic programme button (see the programme chart).

9 Set the required temperature

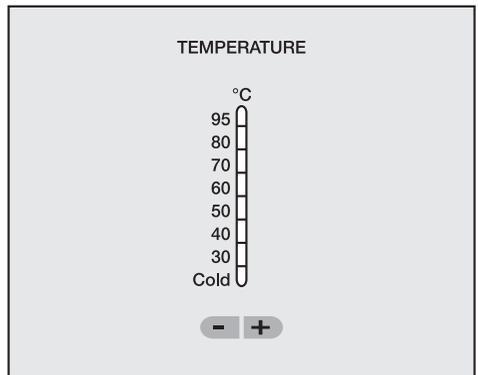


- Press the “(-)+” button until the indicator light for the required temperature lights up.

The maximum temperature is limited in some programmes (see the programme chart).

How to wash correctly

10 Select any additional option required.

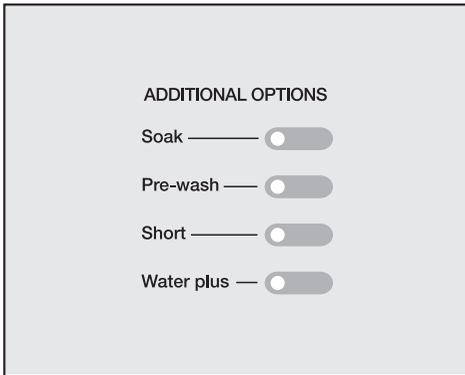


- Press the relevant button.

Indicator light **on** = selected

Indicator light **off** = not selected

An additional option that has been selected can be de-selected by pressing the button.

11 Select a spin speed.

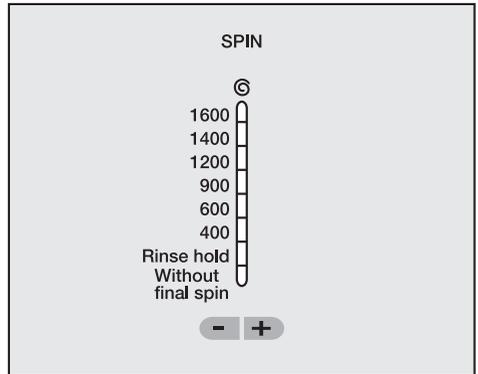

- Press the “**- +**”, button until the indicator light for the required final spin speed lights up.

In some programmes the maximum spin speed is limited. The machine will not allow a higher spin speed to be selected. (see section "programme survey").

Memory function

If the last time a programme was run an additional option or different spin speed was selected, the machine will have stored this information in its memory.

The next time that programme is selected the machine displays the additional option, temperature and spin already stored in memory.

Exception:

Soak, and Delay start.

How to wash correctly

Delay start

Select delay start if required.

The start of programmes can be delayed from **30** minutes up to a maximum of **24 h 00** hours.

- Press the “delay start” button.



- Use the “**-/+**” buttons to set the length of delayed time.

Each press on the (“**+**”) increases the delayed time or on the (“**-**”) shortens it:

- by 30 minutes up to 10 hours.
- by one hour from 10 hours upwards.

To delete delay start:

Press the delay start button.

13 Press the “START” button.


This starts the programme.

After washing

14 Press the “Door” button.

15 Remove the washing.

Only remove washing from the machine once the drum has stopped turning, otherwise you may seriously injure yourself. Make sure the drum is empty. Items left behind could colour run, shrink, or be damaged in the next programme.

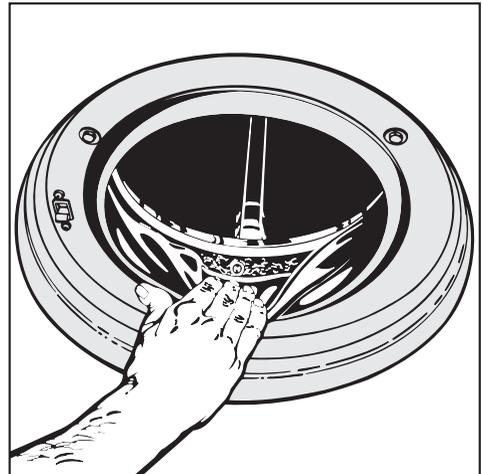

16 Check the folds in the door seal for any small articles e.g. buttons which might be lodged there.

17 Press and release the “I-ON/O-OFF” button.

18 Close the drum door.

Otherwise there is a danger of objects being placed inadvertently in the drum. If these remained unnoticed and were washed in the next load, they could damage the washing.

Load indicator lights

From the absorbency of a wash load the machine can identify the size of load or its composition.

This recognition takes place within the first ten minutes after programme start.

The indicator lights show how the load has been identified in the Cottons and Minimum Iron programmes.

1 Indicator lights on = Minimum-load

2 Indicator lights on = Medium load

3 Indicator lights on = full load

Adding or removing washing after programme start

Washing can be added or removed after the programme has already started, when using the following programmes.

- Cottons
- Minimum iron
- Woollens
- Quick wash
- Mixed wash poly/cottons
- Starch

- Press the “Door” button in and hold it until the door springs open.
- Add or remove items.
- Shut the door.

Apart from some exceptional circumstances the door can be opened during all stages except Spin for Cottons, Woollens, Quick Wash and Mixed Wash poly/cottons (high cotton percentage) and. Starch programmes.

With Minimum Iron and Mixed Wash - Poly/Cottons

(high polyester percentage) the door can be opened during the main wash with some exceptions.

General exceptions:

The door **cannot be** opened when:

- the suds temperature is above **55°C**.
- the additional option “Water plus” has been selected,
- programme locking is switched on.

Load recognition is switched off if extra washing is added or washing is removed. The machine will complete the programme cycle for a full load and maximum load indicator lights up.

How to wash correctly

Programme . . .

. . . cancelling a programme and selecting a new one.

- Switch the machine off and then on again.
- Start the new programme as described in the section "Programme start".

If a new start is made the automatic load recognition is switched off. The machine will wash as for a full load and the maximum load indicator lights up.

. . . altering a programme

The machine will accept the following changes after the "Start" button has been pressed:

- selection of a different temperature, extra selection or de-selection of the "Water plus" and "Quick wash" options can be carried out up to 6 minutes after start.
- the final spin speed can be changed within the restrictions of the programme.


Once the door has been opened the additional functions can no longer be changed.

In order to select another programme the programme must be cancelled and a new start take place.

. . . Repeating a section (e.g. rinse)

A programme selection can be repeated or a particular programme section can be selected direct.

- Switch the machine on
- Select the programme
- Press the "Start" button

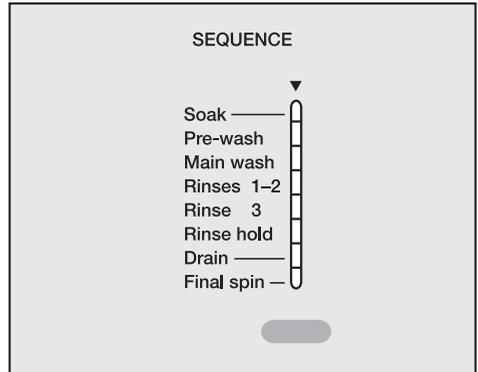

- Press the button to change the programme sequence enough times until the required position is reached.

For rinsing laundry separately the "Delicates" programme is suggested..

. . . Leaving a section out

- Press the button for changing the programme sequence at the spot requested.

The programme will then continue in the next programme stage. The corresponding segment in the programme sequence display illuminates.

When programme locking has been activated the programme cannot be changed nor can a programme section be repeated or left out.

All modern detergents produced for automatic washing machines are suitable, including liquid, compact (concentrated) and special application detergents. Use dispensing aids, e.g. balls, if these are supplied with the detergent.

Woollens and knitwear containing wool mixtures should be washed using a detergent specifically designed for washing woollens.

Amounts of detergent are recommended on the packaging. The right amount to dispense will depend on the following:

- The quantity of washing.
- The soiling level of the washing.

lightly soiled

No visible dirt or stains. Possibly slight body odour.

normally soiled

Visibly dirty and/or just a few slight stains.

heavily soiled

Stains and soiling clearly visible.

- The water hardness level
Check with your local water supplier if you do not know the water hardness level.

Water Hardness

Hardness range	Type of water (hardness)	Total hardness (mg/l)	°dH German
I	soft	0 - 130	0 - 7
II	medium	130 - 250	7 - 14
III	hard	250 - 380	14 - 21
IV	very hard	over 380	over 21

Important

Please note not all detergents dissolve completely at lower water temperatures of 20°C or 30°C and will leave a sludge in the machine leading to staining of laundry. It is advisable to use once in a fortnight a hotter wash of about 60°C to flush machine out.

It is important to dispense the correct amount, because . . .

. . . too little has the following results:

- The washing will not be properly clean and will in time become grey and hard to the touch.
- Greasy particles cling to the washing.
- Lime deposits on the heater elements.

. . . too much results in the following:

- Excessive foam.
- Low level of agitation.
- Poor washing, rinsing and spinning results.
- High water consumption (an additional rinse cycle will automatically switch in).
- Burdening the environment.