

Brief instructions

The headings numbered (1, 2, 3 ...) show the operating sequence and can be used as a brief guide to using your dryer.

1 Sort the laundry

To ensure an even drying result separate out the washed laundry and sort it according to:

- ... the drying level required
- ... the type of fibre or weave
- ... size
- ... the moisture content after spinning.

 Make sure that objects e.g. detergent dispensing balls have been removed from the laundry. They could melt, and cause damage to the dryer or the laundry.

- Remove all objects from pockets such as lighters and matches.
- Check seams and stitching to ensure that padding and linings are intact.
- Fasten duvet covers and pillow cases to prevent small items from being trapped inside them.
- Fasten zips, hooks and eyes etc.
- Tie fabric belts and apron strings.
- Sew in or remove underwiring from bras.

2 Turn on the tumble dryer

- Switch the dryer on by pressing the *I-On/0-Off* button in.


The tumble dryer may be switched on after loading, saving energy as the light will not come on.

3 Load the tumble dryer

- Press the *door* button to open the door.
- Load the laundry loosely into the drum.

Do not overload the drum. See the "Programme chart" for recommended loads for each programme. Overloading can cause unnecessary wear and tear to the laundry and give a disappointing drying result.

- Before closing the door make sure the fluff filter is correctly positioned in the door.

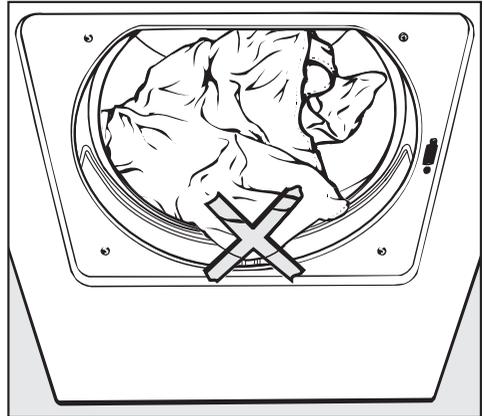


Check the laundry is right inside the drum so that it cannot get trapped or damaged when the door is shut.

- Shut the door either with a gentle swing, or lean against it and push it shut.

How to dry correctly


4 Select a programme

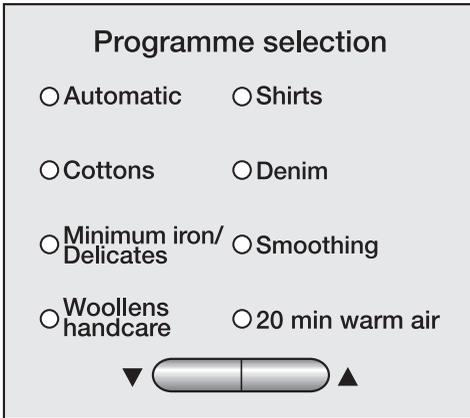

- You can change to another programme by pressing the ▼ or ▲ button.
- the appropriate programme indicator light will come on under *Programme selection*.
- the *Extra options* or *Drying level* indicator lights will also come on.

The *Cottons Normal Plus* program is recommended for a normal load and is the program used in energy consumption tests in accordance with AS/NZS 2442.1 (refer to www.energyrating.gov.au for consumption data).

Automatic, Cottons, Minimum iron/Delicates, Shirts and Denim programmes

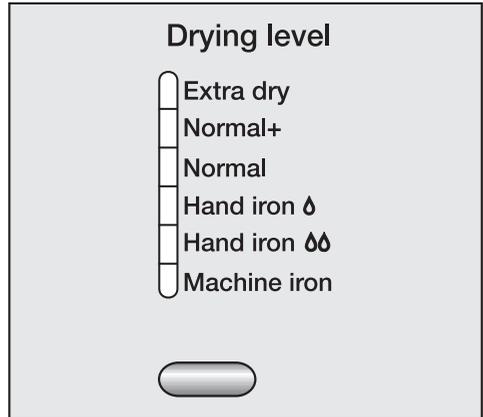

- Press the button underneath *Drying level* repeatedly until the indicator light for the drying level you want lights up.
- Any of the drying levels can be selected for the *Cottons* programme. A more limited range is available when using other programmes.
- The duration of the programme selected will depend on the residual moisture of the laundry, fabric type and the load size. This may mean that the duration will be different each time.

Warm/cool air timed drying programme

- The programme duration is fixed at 20 minutes.

Woollens handcare and Smoothing programmes

- The programme duration is fixed for these programmes.

5 Select any extra options

Selecting/deselecting



Indicator light on = Extra option is selected

(see "Extra options" for more details)

- Each press of the top button selects the Extra option - indicator light on (and deselects the previous option) or no option is selected.

On some programmes *Low temperature* is a standard part of the programme and so cannot be deselected.

- Pressing the lower button selects or deselects Anti-crease.

Cool air:

- First select the *20 min warm air* programme and then press the top extra option button until the *Cool air* indicator light comes on.

Select the buzzer if wished

A buzzer sounds (at intervals for a maximum of 1 hr) to let you know the programme has finished.

The buzzer can be switched on or off even after a programme has started.

The buzzer will still sound if there is a fault, even if it has been switched off.

You can alter the pitch of the buzzer:

- Press the *Buzzer* button (the *Buzzer* indicator light will light up), until the desired pitch is reached. Then release the button.

6 Select Delay start if wished

- The start of a programme can be delayed by up to 24 hours (*24h*). See "Delay start " for more details.

How to dry correctly

5 Start the programme

- Press the *Start/Stop* button.
- The indicator light for the *Start/Stop* button will then change from flashing to being on constantly.
- The programme duration will appear in the display.
- The *Sequence* indicator light for the drying stage reached will come on.

Memory function (for Programme selection)

The electronics will store in memory the drying level and any extra options selected for the current drying programme.

The next time you chose that programme, the indicator lights for these settings will come on. You can either accept these or change them by pressing the appropriate button.

The memory function is deactivated if the programme is cancelled. If the buzzer has been selected, this selection will be saved automatically, whether or not the memory function has been activated.

Before the end of a programme

There is a cooling down phase at the end of the drying sequence (the *Cool air* indicator light will come on). The programme will not finish until the cooling down phase has been completed.

There is no cooling down phase at the end of the *Woollens handcare* and *Smoothing* programmes.

6 Remove the laundry when the programme has finished

The *Anti-crease/Finish* indicator light will come on to indicate that the programme has finished. The indicator light for the drying stage reached (depending on the programme selected) will also come on.

- Press the *Door* button.
- Open the door.
- Remove the laundry.

Check that all items have been removed from the drum. If items are left in the dryer, they could be damaged by overdrying when the dryer is next used.

- Switch the dryer off by pressing the *I-On/O-Off* button.
- Clean the fluff filters.
- Close the door.
- Empty the condensed water container (unless the dryer has been connected for external drainage).
- The condenser unit should be checked and cleaned on a regular basis.

Extras

Low temperature

Short

Cool air



Anti-crease



- It is not possible to select a combination of the *Low temperature*, *Short*, *Cool air* options at the same time.
- See the programme chart for details of the extra options which are suitable for a particular programme.

Low temperature

For drying delicates and fabrics with the ☐ symbol on the care label at a lower temperature.

- For all delicate or minimum iron fabrics with the ☐ symbol on the care label (e.g. acrylic garments).
- The programme duration is longer.
- On some programmes *Low temperature* is a standard part of the programme and so cannot be deselected.

Short

For drying fabrics which can withstand higher temperatures and fabrics with the ☐ symbol on the care label. Do not use on minimum iron or delicate fabrics.

- The programme duration is shorter.

Cool air

Select this option when you only want to air garments with cool air.

- You need to press the *20 min warm air* button first, and then select the *Cool air* extra option.

Anti-crease

Helps prevent creasing, if laundry is not normally removed immediately after the end of a programme.

- The drum will turn at intervals for an hour.

Delay start

To select Delay start

The start of a programme can be delayed by up to 24 hours (24h).

After selecting a programme:

- Press the *Delay start* button repeatedly until the required delay period shows in the display.
- The *Delay start* indicator light will flash.
- Times of:
 - up to 10h are selected in 30 minute steps
 - more than 10h in 1 hour steps
- If you keep the *Delay start* button pressed in, the time will continue to increase up to 24h.

To begin Delay start

- Press the *Start/Stop* button.
- The delay start time will begin to count down and the *Delay start* indicator light will come on.

The delay start time counts down towards the start of the programme as follows:

- more than 10h by the hour
- less than 10h in minutes

The drum will turn briefly every hour to help prevent creasing.

While the delay start time is counting down, you can still add laundry to the drum:

- To do this, first switch the dryer off and open the door.
- Add the laundry.
- Close the door and switch the dryer back on again.

To cancel Delay start

- Press the *Start/Stop* button.
- Press the *Start/Stop* button again to start the programme.

Programme chart

Automatic		Max. load: 3.5 kg*
Normal+, Normal, Hand iron Δ		
Fabric type	Mixed loads of cotton and minimum iron fabrics. Sort according to colour.	
Extra option	Anti-crease	
Cottons		Max. load: 6 kg*
Extra dry, Normal+, Normal		
Fabric type	Single and multi-layered cotton fabrics such as: e.g.: towelling, jerseywear, T-shirts, underwear.	
Notes	<ul style="list-style-type: none"> – Select <i>Extra dry</i> for multi-layered and very thick fabrics. – Do not use <i>Extra dry</i> for jersey fabrics (e.g. T-shirts, underwear), as they have a tendency to shrink. 	
Extra options	Low temperature (select this option for delicate fabrics with the  symbol on the care label), Short, Anti-crease	
Hand iron Δ, Hand iron $\Delta\Delta$, Machine iron		
Fabric type	Cottons or linen fabrics, e.g.: table linen, bed linen, starched laundry.	
Note	– To prevent laundry from drying out it should be rolled up until you are ready for ironing.	
Extra options	Low temperature (select this option for delicate fabrics with the  symbol on the care label), Short, Anti-crease	
Minimum iron/Delicates		Max. load: 3 kg*
Normal+, Normal, Hand iron Δ		
Fabric type	Minimum iron items made of cotton, synthetic or blended fabrics, e.g.: shirts, blouses, skirts and table cloths.	
Extra options	Low temperature (select this option for delicate fabrics with the  symbol on the care label), Short, Anti-crease	

* Weight of dry laundry

Programme chart

Woollens handcare		Max. load: 2 kg*
Fabric type	Woollen fabrics	
Note	<ul style="list-style-type: none"> – This programme only fluffs up woollen garments. They are not dried completely by this programme. – Remove garments as soon as the programme has finished and leave to finish drying at room temperature. 	
Extra option	Low temperature. (Low temperature cannot be deselected).	
Shirts		Max. load: 2 kg*
Normal+, Normal, Hand iron Δ		
Garment	Shirts and blouses.	
Extra options	Low temperature. (Low temperature cannot be deselected), Anti-crease	
Denim		Max. load: 3 kg*
Normal, Hand iron Δ		
Fabric type	Denim garments, e.g. jeans, jackets, skirts, shirts.	
Extra options	Low temperature. (Low temperature cannot be deselected), Anti-crease	
Smoothing		Max. load: 3 kg*
Fabric type	<ul style="list-style-type: none"> – Cotton and linen fabrics. – Minimum iron items made of mixed fibres, cottons or synthetics, e.g.: trousers, jackets, shirts. 	
Notes	<ul style="list-style-type: none"> – Smooths out creasing caused during the spin cycle in the washing machine. – Fabrics are not completely dried in this programme. Remove garments as soon as the programme has finished and leave to finish drying at room temperature. 	
Extra options	Low temperature. (Low temperature cannot be deselected), Anti-crease	
Warm air		Max. load: 6 kg*
Fabric type	<ul style="list-style-type: none"> – "Voluminous" and multi-layered fabrics whose layers have different drying characteristics, e.g. jackets, pillows. – For drying individual items, e.g. bath towels, bathing costumes, tea-towels and small loads. 	
Extra options	<ul style="list-style-type: none"> – Low temperature (select this option for delicate fabrics with the <input checked="" type="checkbox"/> symbol on the care label), Anti-crease. – Press the Cool air extra option button if you only wish items to be aired with cool air. 	

* Weight of dry laundry