

# Operating modes

---

## Traditional oven functions

This oven offers the following traditional oven functions:

- Fan plus
- Auto roast
- Grill
- Fan grill

These cook and brown the food.

### Fan plus

This system works by the circulation of heated air.

A fan in the back wall draws in the air, heats it over a heater element and blows it back into the oven cavity through the carefully spaced openings in the back panel.

The oven does not usually need to be pre-heated as the heated air reaches the food straight away. Pre-heating may be necessary for foods such as puff pastry and yeast mixtures where instant heat is required to make them rise quickly.

When using Fan plus, you can bake and roast on two different levels at the same time.

## Auto roast

After the selected temperature is entered, the oven heats initially to a high temperature which seals the meat to keep it succulent and tasty. The oven temperature is then automatically returned to the pre-selected setting after this initial boost of heat.

## Grill

The grill is ready for use when it glows red a few minutes after being switched on. Pre-heat the with the oven door closed for approx. 5 minutes before starting to cook. Grill with the oven door closed.

## Fan grill

The hot air from the grill is distributed over the food by the fan on the back wall of the oven. This enables a lower temperature to be selected than for normal oven grilling. Pre-heat the with the oven door closed for approx. 5 minutes before starting to cook. Grill with the oven door closed.

## Combination programmes

- Microwave + Fan plus
- Microwave + Auto roast
- Microwave + Grill
- Microwave + Fan grill

The combination programmes enable food to be reheated and cooked quickly with even browning results.

The combination programmes enable the grill or the fan setting to be used in conjunction with the microwave facility.

The Microwave + Fan plus combination programme is the most effective because the heat reaches the food to be baked or cooked immediately, giving the greatest savings in both time and energy.

In general when using the combination programmes, you should not set the microwave power level higher than 150 W for baking, and not higher than 450 W for cooking, roasting and grilling.

## Automatic programmes

- Defrosting
- Reheating
- Cooking

Food can be cooked, reheated or defrosted using microwave power or combination programmes. Automatic programmes are dependent on weight, i.e. after selecting the appropriate food group, you then enter the weight of the food and the microwave power setting and time will be calculated automatically.

# Operating sequence

---

## Main menu

The main menu will appear in the display after you have switched the appliance on with the ON/OFF switch.



The main menu contains 8 sub-menus, which are also further sub-divided. The various functions can be selected by using just two controls.

The first three functions in the main menu (Quick MW, Microwave, Fan plus) are suggestions only. You can change the order in which they appear, or replace them with programmes which you use more frequently.

The remaining five sub-menus cannot be altered.

## Quick MW

This programme uses microwave power at 1000 W for one minute. The "settings" for this programme can be altered if wished via the Settings menu.

## Microwave

The parameters for a microwave programme can be pre-set, including the power level, the duration and also the settings for delaying the start.

## Fan plus

As soon as this programme is selected the hot air fan can be heard, and the appliance starts heating up using the pre-set temperature of 160°C. The temperature can be changed within a range of 30 to 225°C. The duration and a delay start time can also be programmed in. If you prefer to start the programme manually you can set up the appliance so that the hot air fan does not start up immediately.

## **Microwave+...**

This programme combines microwave power with the following traditional oven functions: Auto Roast, Grill, Fan Plus and Fan Grill. The duration, delayed start time, microwave power level (max. 450 W) and the temperature for the traditional oven function can all be set.

## **All functions**

The oven light and all functions, such as Auto Roast, Grill, Fan Plus, Microwave, Microwave+, Fan Grill and Quick MW can all be selected via this menu.

## **Automatic**

A number of automatic programmes are stored in this menu. For an overview of them please see "Automatic programmes".

## **User programmes**

You can save processes which you use most frequently here and also give them special names to help you select them easily.

## **Settings**

A number of settings, such as a language choice, can be selected or changed in this menu (see "Settings").

# Operating sequence

---

Press the ON/OFF switch to call up the main menu:




- Turn the function selector to highlight the option you wish to select.  
Press the function selector to call up the sub-menu of the option you have highlighted (e.g.: MICROWAVE).



The field selected shows a suggested power level of 1000 W.

- Turn the function selector if you wish to change this setting.

The display will change after a few seconds and you can then enter the duration for the microwave programme. If you don't want to wait for the display to change you can simply press the function selector to confirm the power setting showing in the display.

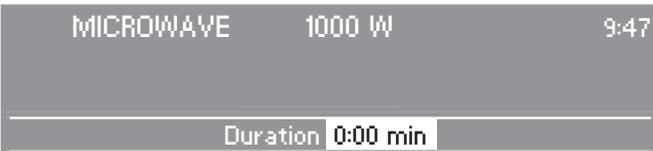

- Turn the function selector until the required duration shows in the display.
- Press the function selector to confirm your selection.



The word "START" will be highlighted for a few seconds.

- Press the function selector whilst "START" is highlighted to start the programme.

## Operating sequence

---

If you over-run this time and the word "START" is no longer highlighted, you will have to press the function selector twice to start the programme.

Whilst the programme is running the duration, power level and time of day will all show in the display.

MICROWAVE	1000 W	9:47
Duration 2:20 min	STOP	
Min minder	Duration	Save

Once a programme has started it can be interrupted by pressing the function selector or cancelled by pressing the ON/OFF switch.

The door is not locked during microwave operation and can be opened at any time without having to stop the programme. This only interrupts the programme. The programme can be continued after closing the door again and as long as "START" is highlighted in the display. Press the function selector.

## Programming cooking times


---

The oven can be set up to switch off, or on and off automatically.

As soon as a cooking function is selected, the word "Duration" will also appear in the display.



Selecting "Duration" gives the following input options: Start time, Duration, Finish.

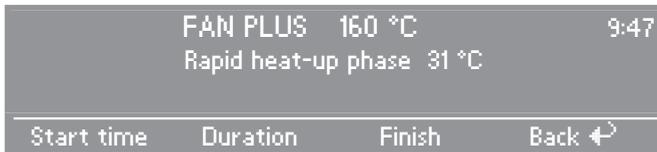

Select **Duration** and enter the duration of a cooking programme.

Once the time set has elapsed, the oven will switch itself off automatically.

You can set the **Start time** and **Finish** to specify the time you want cooking to start or finish.

The oven will switch on or off automatically at the time you have set.

To **switch a programme off automatically** you can either enter the Duration or just the Finish time.

To **switch a programme on and off automatically** you have three choices:

- Enter the Duration and Finish time
- Enter the Start time and the Duration
- Enter the Start time and the Finish time

The time not entered is then calculated automatically.

The **Start time** will be shown in the display up until the heating elements **are switched on**.

**During the course of the programme** you can follow the **Duration** counting down in the display.

At the end of the programme the message "Programme finished" will appear in the display and the buzzer will sound.

## Using the residual heat, Energy-save function

Shortly before the end of a programme using a traditional function the heating elements will be switched off automatically.

The residual heat is sufficient to finish cooking.

Using the residual heat in the oven saves energy.

"Energy save phase" will appear in the display to show that the oven is in **energy save** mode. The actual temperature is no longer visible.

The cooling fan continues to run, as does the hot air fan if a "fan" setting had been chosen.

## To check and change an entered time

It is possible to check or change times entered for a cooking programme at any time by calling up the relevant function.

## To delete a set time

- Press the ON/OFF switch

If there is a power cut, all data entered will be deleted.

# Automatic programmes

---

Automatic programmes can be used for cooking, reheating and defrosting.

The oven must be allowed to cool down to room temperature before starting an automatic programme. Cooking results will be affected if the oven is too hot when you start.

Pay careful attention to what is shown in the display. For instance, you will be asked to enter the weight or number of items, or to add liquid.

Automatic programmes can also be saved as "User Programmes" and be saved into the Main menu.



QUICK MW                      ALL FUNCTIONS ...  
MICROWAVE                    **AUTOMATIC ...**  
FAN PLUS                      USER PROGS ...  
MICROWAVE+ ...              SETTINGS P...

- Select the "Automatic" menu option.
- Then select "Defrost", "Reheat" or "Cook" to get into their sub-menus.
- Follow the messages given in the display until the programme starts.
- If you wish to delay the start time this is also possible.
- If you have already started an automatic programme it can only be stopped by switching the appliance off.

The overview below lists the sub-menus for defrosting and reheating. The chart shows the cooking programmes available.

## Overview of automatic programmes

### Defrost

Meat, poultry, fish, vegetables, fruit, casseroles, soup, bread, plated meals

### Reheat

Meat, poultry, fish, vegetables, casseroles, soup, plated meals

### Cook

(see chart)

## Automatic cooking programmes

Food is cooked using microwave power or a combination programme.

<b>Meat</b>
<b>Poultry</b>
<b>Fish</b>
<b>Cakes/Biscuits</b>
Apple cake
Gateau
Plaited loaf
Marble cake
Streusel cake
Cakes/Biscuits
Bread
Bake
<b>Bakes/Gratin</b>
Lasagne
Potato gratin
Pasta bake
<b>Frozen food</b>
Baguettes - topped
Croquettes
Fish with topping
<b>Vegetables</b>
<b>Fruit</b>
<b>Casseroles</b>
<b>Soup</b>